

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST D. MC AGENCY YCSO
DATE 11-19-09 TIME 2238
INTOXILYZER SERIAL # 80-001019 LOCATION Prescott Jail

- CM* 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .10 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- CM* 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- CM* 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- CM* 4. Air blank completed.
- CM* 5. Calibration check completed. Test results 0. 0.17 AC.
- CM* 6. Air blank completed.
- CM* 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE *[Signature]* 543/QAS# 33426

INTOXILYZER 8000

Location: YCSO PRESCOTT JAIL

Serial Number: 80-001019

11/19/2009

22:38:26

Standard Lot#: 818201G

Last Changed By: D. RAISS #3693

QAS: D. MCGINNIS #8086

YAVAPAI CSO

Test	g/210L	Time
Air Blank	0.000	22:38:53
Cal Check	0.097	22:39:12
Air Blank	0.000	22:39:41


Operator's Signature

INTOXILYZER 8000

Location: YCSO PRESCOTT JAIL

Serial Number: 80-001019

11/19/2009

22:35:12

Standard Lot#: 818201G

Last Changed By: D. RAISS #3693

QAS: D. MCGINNIS #8086

YAVAPAI CSO

Test	g/210L	Time
Air Blank	0.000	22:35:40
Cal Check	INT*	22:35:59
Air Blank	0.000	22:36:31

*Interferent Detect


Operator's Signature SB/QAS #33426

EXHIBIT G-4
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST D. McGinnis AGENCY YCSO
DATE 11-19-09 TIME 2244
INTOXILYZER SERIAL # 80-001019 LOCATION Prescott Jail

DM 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- DM 1. Clock time check.
DM 2. Date check.

OPERATIONAL TESTS

- DM 1. Alcohol-free subject test result 0. 000 AC.
DM 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
DM 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
DM 4. Standard Calibration Check standard 0. 10 AC. Result 0. 097 AC.

Instrument is operating properly and accurately. YES DM NO _____

COMMENTS

All OK

SIGNATURE

D. McGinnis 543/QA# 33426

INTOXILYZER 8000
Location: YCSO PRESCOTT JAIL
Serial Number : 80-001019
11/19/2009

22:44:26

Standard Lot#: 818201G
Last Changed By: D. RAISS #3693

QAS: D. MCGINNIS #8086
YAVAPAI CSO

Operator: D. MCGINNIS #8086
YAVAPAI CSO

Subject: SQAP,TEST

DOB: 09/09/1990

Sex: M

Weight: 200

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	22:45:18
Diagnostic Test	Pass	22:45:46
Air Blank	0.000	22:46:14
0.100 Cal Check	0.097	22:46:32
Air Blank	0.000	22:47:02
Subject Test	0.000	22:47:19
Air Blank	ABT*	22:47:26
Air Blank	RFI**	22:47:34

*Sequence Aborted

**RFI Detect

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: YCSO PRESCOTT JAIL
Serial Number : 80-001019
11/19/2009 22:48:30

Standard Lot#: 818201G
Last Changed By: D. RAISS #3693

QAS: D. MCGINNIS #8086
YAVAPAI CSO

Operator: D. MCGINNIS #8086
YAVAPAI CSO

Subject: SQAP,TEST
DOB: 09/09/1990
Sex: M Weight: 200

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	22:49:29
Diagnostic Test	Pass	22:49:56
Air Blank	0.000	22:50:24
0.100 Cal Check	0.097	22:50:43
Air Blank	0.000	22:51:13
Subject Test	0.083*	22:54:21
Air Blank	0.000	22:54:53
Air Blank	0.000	22:55:20
Subject Test	XXX**	22:55:47
Air Blank	IPS***	22:55:56

*Deficient Sample

**Invalid Sample

Begin new deprivation period

***Improper Sample

Not a Successfully Completed Test Sequence

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST D. McGinnis AGENCY YCSO
DATE 11-19-09 TIME 2301
INTOXILYZER SERIAL # 80-001019 LOCATION Prescott Jail

- AM* 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution, 10 AC.
~~OR~~
~~Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C~~
- AM* 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
AM 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
AM 4. Air blank completed.
AM 5. Calibration check completed. Test results 0. 097 AC.
AM 6. Air blank completed.
AM 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE *Alan McGinnis* 543/QAS# 33426

INTOXILYZER 8000

Location: YCSO PRESCOTT JAIL

Serial Number: 80-001019

11/19/2009

23:01:05

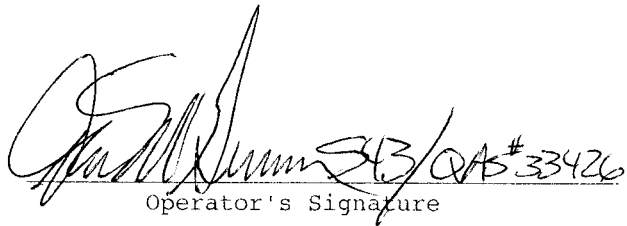
Standard Lot#: 818201G

Last Changed By: D. RAISS #3693

QAS: D. MCGINNIS #8086

YAVAPAI CSO

Test	g/210L	Time
Air Blank	0.000	23:01:32
Cal Check	0.097	23:01:51
Air Blank	0.000	23:02:20


Operator's Signature