

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE


QA SPECIALIST RT PALE ES9 AGENCY YAVAPAI COUNTY SHERIFF
DATE 8/24/13 TIME _____
INTOXILYZER SERIAL # 80-001282 LOCATION CAMP VERDE JAIL

- (X) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
~~Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C~~
- (X) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (X) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (X) 4. Air blank completed.
- (X) 5. Calibration check completed. Test results 0. 098 AC.
- (X) 6. Air blank completed.
- (X) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE 

DPS Form Exh G-2 (Rev 05-01)

NEW BOTTLE 1075 PSI

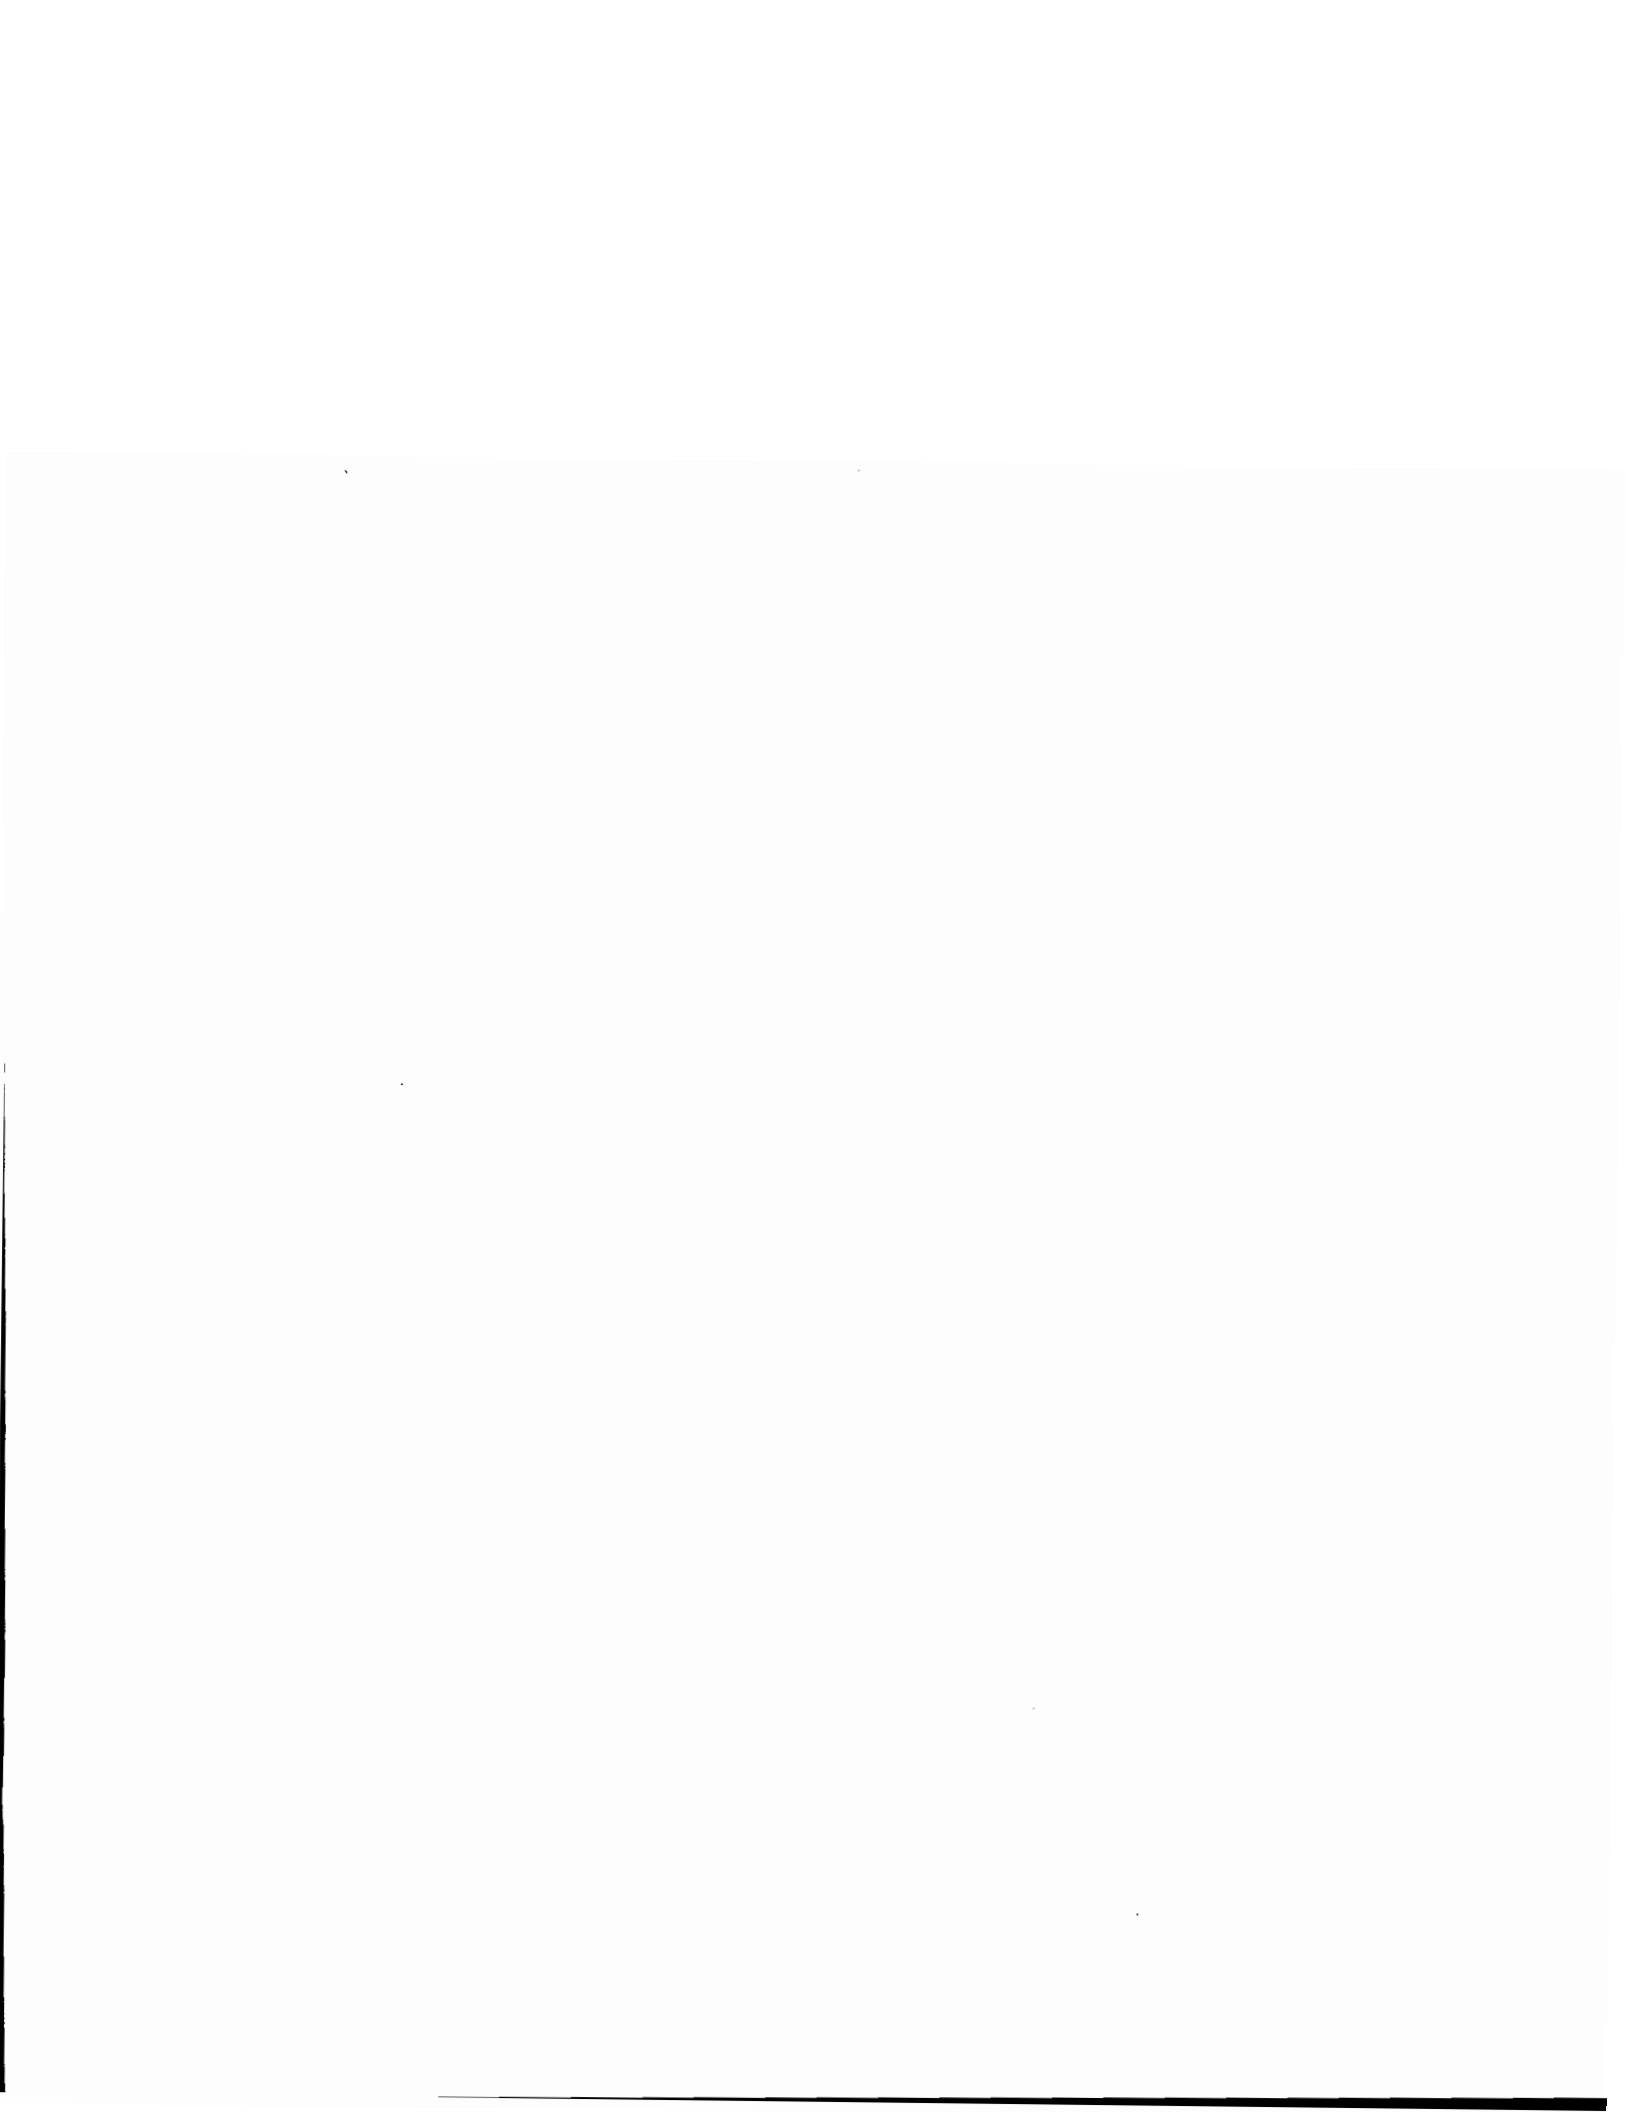

INTOXILYZER 8000

Location: YCSO-VERDE JAIL

Serial Number: 80-001222

Core Version: 8105.48

08/24/2013

17:38:27

Standard Lot#: 15013100A2

Last Changed By: R. POOLE #9014

QAS: R. POOLE #9014

YAVAPAI CSO

Operator: R. POOLE #9014

YAVAPAI CSO

Test g/210L Time

Air Blank 0.000 17:38:59
0.100 Cal Check 0.099 17:39:20
Air Blank 0.000 17:39:49

Preventative Maintenance
Performed -- Timer Reset

RECEIVED

AUG 28 2013

TC