


EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. MEDINA AGENCY PRESOTT P.D.
DATE 11/17/11 TIME 0809 HRS
INTOXILYZER SERIAL # 80-000337 LOCATION PRESOTT P.D.

- () 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .200 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- () 4. Air blank completed.
- () 5. Calibration check completed. Test results 0.099 AC.
- () 6. Air blank completed.
- () 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE 

DPS Form Exh G-2 (Rev 05-01)

* PRIOR TO TANK/BOTTLE REPLACEMENT.

11/17/11
Med

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
11/17/2011

08:09:56

Standard Lot#: 01011100A1
Last Changed By: T. ATTENBERGER #252

QAS: M. MEDINA #356
PRESCOTT PD

Operator: M. MEDINA #356
PRESCOTT PD

Test	g/210L	Time
Air Blank	0.000	08:10:30
0.100 Cal Check	0.099	08:10:51
Air Blank	0.000	08:11:20

Preventative Maintenance
Performed -- Timer Reset

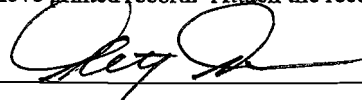
19G2

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. MEDINA AGENCY PRESOTT P.D.
DATE 11/17/11 TIME 0823
INTOXILYZER SERIAL # 80-000337 LOCATION PRESOTT P.D.

- () 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- () 4. Air blank completed.
- () 5. Calibration check completed. Test results 0. 098 AC.
- () 6. Air blank completed.
- () 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE 

DPS Form Exh G-2 (Rev 05-01)

~~*~~ AFTER BOTTLE WAS REPLACED

11-17-11



INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
11/17/2011

08:23:47

Standard Lot#: 03811100A2
Last Changed By: M. MEDINA #356

QAS: M. MEDINA #356
PRESCOTT PD

Operator: M. MEDINA #356
PRESCOTT PD

Test	g/210L	Time
Air Blank	0.000	08:24:18
0.100 Cal Check	0.098	08:24:38
Air Blank	0.000	08:25:08

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-4
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST M. MEDINA AGENCY PRESOTT P.D.
DATE 11/17/11 TIME 0823
INTOXILYZER SERIAL # 80-000337 LOCATION PRESOTT P.D.

(1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (1. Clock time check.
(2. Date check.

OPERATIONAL TESTS

- (1. Alcohol-free subject test result 0. 000 AC.
(2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
(3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
(4. Standard Calibration Check standard 0. .100 AC. Result 0. .098 AC.

Instrument is operating properly and accurately. YES _____ NO _____

COMMENTS

SEE BELOW REGARDING 2 PREOR ATTEMPTS TO EXHIBIT "A"
SEE BELOW REGARDING 2 PREOR ATTEMPTS TO EXHIBIT "C" & "D"

SIGNATURE 

DPS Form Exh G-4 (Rev 05-01)

EXHIBIT "B" OPERATION ERROR NO SUBJECT TEST RESULT (NOT LONG ENOUGH)
EXHIBIT "C" OPERATION ERROR NO AIR BLANK AFTER SUBJECT TEST (TOO SOON)
EXHIBIT "A" 1ST MOUTH ALCOHOL TEST ATTEMPT (TEST TERMINATED)
EXHIBIT "B" 2ND MOUTH ALCOHOL TEST ATTEMPT (TEST TERMINATED)

"A"

11-17-11



INTOXILYZER 8000
 Location: PRESCOTT P.D
 Serial Number: 80-000337
 Core Version: 8105.48
 11/17/2011 08:40:27

Standard Lot#: 03811100A2
 Last Changed By: M. MEDINA #356

QAS: M. MEDINA #356
 PRESCOTT PD

Operator: M. MEDINA #356
 PRESCOTT PD

Subject: SQAP, TEST
 DOB: 01/01/2000
 Sex: M Weight: 180

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:41:29
Diagnostic Test	Pass	08:42:03
Air Blank	0.000	08:42:30
0.100 Cal Check	0.098	08:42:51
Air Blank	0.000	08:43:21
Subject Test	0.000	08:43:38
Air Blank	0.000	08:44:06
Wait	ABT*	
Air Blank	RFI**	08:44:38

*Sequence Aborted
 **RFI Detect

Not a Successfully Completed Test Sequence

"B"

11-17-11

u

INTOXILYZER 8000

Location: PRESCOTT P.D

Serial Number: 80-000337

Core Version: 8105.48

11/17/2011

08:34:27

Standard Lot#: 03811100A2

Last Changed By: M. MEDINA

#356

QAS: M. MEDINA

#356

PRESCOTT PD

Operator: M. MEDINA

#356

PRESCOTT PD

Subject: SQAP, TEST

DOB: 01/01/2000

Sex: M

Weight: 180

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:36:09
Diagnostic Test	Pass	08:36:43
Air Blank	0.000	08:37:10
0.100 Cal Check	0.099	08:37:31
Air Blank	0.000	08:38:01
Subject Test	0.000	08:38:19
Air Blank	ABT*	08:38:32
Air Blank	RFI**	08:38:39

*Sequence Aborted

**RFI Detect

Not a Successfully Completed Test Sequence

"c"

11-17-11
[Signature]

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
11/17/2011 08:29:31

Standard Lot#: 03811100A2
Last Changed By: M. MEDINA #356

QAS: M. MEDINA #356
PRESCOTT PD

Operator: M. MEDINA #356
PRESCOTT PD

Subject: SQAP, TEST
DOB: 01/01/1900
Sex: M Weight: 180

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:30:56
Diagnostic Test	Pass	08:31:31
Air Blank	0.000	08:31:58
0.100 Cal Check	0.099	08:32:19
Air Blank	0.000	08:32:48
Subject Test	ABT*	08:33:48
Air Blank	RFI**	08:34:00

*Sequence Aborted
**RFI Detect

Not a Successfully Completed Test Sequence

"A1"

11-17-11
[Signature]

INTOXILYZER 8000
 Location: PRESCOTT P.D
 Serial Number: 80-000337
 Core Version: 8105.48
 11/17/2011 08:45:11

Standard Lot#: 03811100A2
 Last Changed By: M. MEDINA #356

QAS: M. MEDINA #356
 PRESCOTT PD

Operator: M. MEDINA #356
 PRESCOTT PD

Subject: SQAP, TEST
 DOB: 01/01/2000
 Sex: M Weight: 180

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:46:11
Diagnostic Test	Pass	08:46:45
Air Blank	0.000	08:47:13
0.100 Cal Check	0.098	08:47:34
Air Blank	0.000	08:48:03
Subject Test	XXX*	08:48:46
Air Blank	0.000	08:49:19

*Invalid Sample
 Begin new deprivation period

Not a Successfully Completed Test Sequence

"B1"

11-17-11
[Signature]

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
11/17/2011 08:52:36

Standard Lot#: 03811100A2
Last Changed By: M. MEDINA #356

QAS: M. MEDINA #356
PRESCOTT PD

Operator: M. MEDINA #356
PRESCOTT PD

Subject: SQAP, TEST
DOB: 01/01/2000
Sex: M Weight: 180

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:53:35
Diagnostic Test	Pass	08:54:09
Air Blank	0.000	08:54:36
0.100 Cal Check	0.097	08:54:57
Air Blank	0.000	08:55:27
Subject Test	XXX*	08:56:00
Air Blank	0.000	08:56:33

*Invalid Sample
Begin new deprivation period

Not a Successfully Completed Test Sequence

"C1"

11/17/11
M. Medina

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
11/17/2011 08:57:53

Standard Lot#: 03811100A2
Last Changed By: M. MEDINA #356

QAS: M. MEDINA #356
PRESCOTT PD

Operator: M. MEDINA #356
PRESCOTT PD

Subject: SQAP, TEST
DOB: 01/01/2000
Sex: M Weight: 180

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	08:59:40
Diagnostic Test	Pass	09:00:14
Air Blank	0.000	09:00:41
0.100 Cal Check	0.098	09:01:02
Air Blank	0.000	09:01:32
Subject Test	0.051*	09:04:39
Air Blank	0.000	09:05:11
Air Blank	0.000	09:05:38
Subject Test	XXX**	09:06:44
Air Blank	0.000	09:07:17

*Deficient Sample
**Invalid Sample
Begin new deprivation period

Not a Successfully Completed Test Sequence

"D1"

11/17/11
[Signature]

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
11/17/2011 09:08:13

Standard Lot#: 03811100A2
Last Changed By: M. MEDINA #356

QAS: M. MEDINA #356
PRESCOTT PD

Operator: M. MEDINA #356
PRESCOTT PD

Subject: SQAP, TEST
DOB: 01/01/2000
Sex: M Weight: 180

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	09:09:38
Air Blank	0.000	09:10:06

*Improper Sample

Not a Successfully Completed Test Sequence

240 G2


EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST MATT MEDINA AGENCY PRESOTT P.D.
DATE 11/17/11 TIME 0911 HOURS
INTOXILYZER SERIAL # 80-000337 LOCATION PRESOTT P.D.

- () 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- () 4. Air blank completed.
- () 5. Calibration check completed. Test results 0. 098 AC.
- () 6. Air blank completed.
- () 7. Remove printed record. Attach the record to the completed checklist.

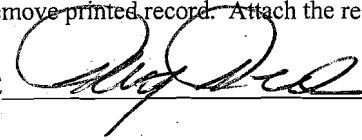SIGNATURE 

11-17-11



INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
11/17/2011 09:11:12

Standard Lot#: 03811100A2
Last Changed By: M. MEDINA #356

QAS: M. MEDINA #356
PRESCOTT PD

Operator: M. MEDINA #356
PRESCOTT PD

Test	g/210L	Time
Air Blank	0.000	09:11:42
0.100 Cal Check	0.098	09:12:03
Air Blank	0.000	09:12:32

Preventative Maintenance
Performed -- Timer Reset