

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST T. ATENBERGER #252 AGENCY Prescott P.D.
DATE 04/26/18 TIME 1029
INTOXILYZER SERIAL # 80-000337 LOCATION PPD

- () 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- () 4. Air blank completed.
- () 5. Calibration check completed. Test results 0. 098 AC.
- () 6. Air blank completed.
- () 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE T. Atenberger #252

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
04/26/2018

10:29:45

Standard Lot#: 27016100A1
Last Changed By: S. HILTON #372

QAS: T. ATTENBERGER #252
PRESCOTT PD

Operator: T. ATTENBERGER #252
PRESCOTT PD

Test	g/210L	Time
Air Blank	0.000	10:30:15
0.100 Cal Check	0.098	10:30:36
Air Blank	0.000	10:31:06

Preventative Maintenance
Performed -- Timer Reset

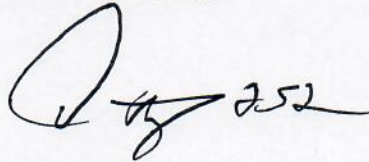


EXHIBIT G-4
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST T. Arzamas #252 AGENCY Prescott P.D.
DATE 04/26/18 TIME 1031
INTOXILYZER SERIAL # 80-000337 LOCATION P.P.D.

1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- 1. Clock time check.
- 2. Date check.

OPERATIONAL TESTS

- 1. Alcohol-free subject test result 0. 000 AC.
- 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
- 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
- 4. Standard Calibration Check standard 0. 200 AC. Result 0. 097 AC.

Instrument is operating properly and accurately. YES NO

COMMENTS

ALL FUNCTIONING CORRECTLY.

SIGNATURE

T. Arzamas #252

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
04/26/2018

10:31:21

Standard Lot#: 27016100A1
Last Changed By: S. HILTON #372

QAS: T. ATTENBERGER #252
PRESCOTT PD

Operator: T. ATTENBERGER #252
PRESCOTT PD

Subject: SQAP,TEST
DOB: 01/01/1900
Sex: M Weight: 300

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:32:17
Diagnostic Test	Pass	10:32:51
Air Blank	0.000	10:33:18
0.100 Cal Check	0.098	10:33:39
Air Blank	0.000	10:34:09
Subject Test	0.000	10:34:38
Air Blank	0.000	10:35:06
Wait	ABT*	
Air Blank	0.000	10:35:42

*Sequence Aborted



Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
04/26/2018

10:36:03

Standard Lot#: 27016100A1
Last Changed By: S. HILTON #372

QAS: T. ATTENBERGER #252
PRESCOTT PD

Operator: T. ATTENBERGER #252
PRESCOTT PD

Subject: SQAP, TEST
DOB: 01/01/1900
Sex: M Weight: 300

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	10:36:51
Air Blank	0.000	10:37:20

*Improper Sample

A handwritten signature in black ink, appearing to be 'T. Attenberger', with the number '252' written to the right of the signature.

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
04/26/2018

10:37:34

Standard Lot#: 27016100A1
Last Changed By: S. HILTON #372

QAS: T. ATTENBERGER #252
PRESCOTT PD

Operator: T. ATTENBERGER #252
PRESCOTT PD

Subject: SQAP, TEST

DOB: 01/01/1900

Sex: M

Weight: 300

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	10:38:20
Air Blank	0.000	10:38:48

*RFI Detect

A handwritten signature in black ink, appearing to be 'T. Attenberger', with the number '252' written below it.

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
04/26/2018

10:39:08

Standard Lot#: 27016100A1
Last Changed By: S. HILTON #372

QAS: T. ATTENBERGER #252
PRESCOTT PD

Operator: T. ATTENBERGER #252
PRESCOTT PD

Subject: SQAP, TEST

DOB: 01/01/1900

Sex: M

Weight: 300


15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	10:40:06
Diagnostic Test	Pass	10:40:40
Air Blank	0.000	10:41:07
0.100 Cal Check	0.097	10:41:28
Air Blank	0.000	10:41:59
Subject Test	0.045*	10:45:06
Air Blank	0.000	10:45:39
Air Blank	0.000	10:46:06
Subject Test	XXX**	10:46:34
Air Blank	0.000	10:47:09

*Deficient Sample

**Invalid Sample

Begin new deprivation period



Not a Successfully Completed Test Sequence

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST T. Aron Berger #252 AGENCY Prescott P.D.
DATE 04/26/18 TIME 1047
INTOXILYZER SERIAL # 80-000337 LOCATION P.P.D.

- (✓) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (✓) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (✓) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (✓) 4. Air blank completed.
- (✓) 5. Calibration check completed. Test results 0. 0917 AC.
- (✓) 6. Air blank completed.
- (✓) 7. Remove printed record; Attach the record to the completed checklist.

SIGNATURE [Signature] 252

INTOXILYZER 8000
Location: PRESCOTT P.D
Serial Number: 80-000337
Core Version: 8105.48
04/26/2018

10:47:47

Standard Lot#: 27016100A1
Last Changed By: S. HILTON #372

QAS: T. ATTENBERGER #252
PRESCOTT PD

Operator: T. ATTENBERGER #252
PRESCOTT PD

Test	g/210L	Time
Air Blank	0.000	10:48:18
0.100 Cal Check	0.097	10:48:38
Air Blank	0.000	10:49:08

Preventative Maintenance
Performed -- Timer Reset



A handwritten signature in black ink, appearing to be 'T. Attenberger', followed by the number '252'.