

INTOXILYZER 8000
Location: COTTONWOOD PD
Serial Number: 80-000933
05/31/2009

03:13:06

Standard Lot#: 804301I
Last Changed By: R. SCARIM #592

QAS: M. WATSON #609
COTTONWOOD PD

Test	g/210L	Time
Air Blank	0.000	03:13:34
Cal Check	0.098	03:13:52
Air Blank	0.000	03:14:22

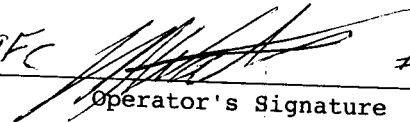
OFC  #609
Operator's Signature

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)
ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST M. WATSON AGENCY COTTONWOOD PD
DATE 05/31/09 TIME 0313 HOURS
INTOXILYZER SERIAL # 80-000933 LOCATION COTTONWOOD PD

- (MAN) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution _____ AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (MAN) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (MAN) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (MAN) 4. Air blank completed.
- (MAN) 5. Calibration check completed. Test results 0.098 AC.
- (MAN) 6. Air blank completed.
- (MAN) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE *[Signature]* ALD