

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST DAN RAISS AGENCY YAVAPAI Co-SO.  
DATE 2-6-08 TIME 1700  
INTOXILYZER SERIAL # 80-001019 LOCATION YCSO-PRESCOTT JAIL

- (OK) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- (OK) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (OK) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (OK) 4. Air blank completed.
- (OK) 5. Calibration check completed. Test results 0. 098 AC.
- (OK) 6. Air blank completed.
- (OK) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Manuel Q. Raim #5-31/QAS #33026

DPS Form Exh G-2 (Rev 05-01)

DRY GAS CHANGE  
NEW LOT NO. 730901I  
EXPIRES 11-06-09

INTOXILYZER 8000

Location: YCSO PRESCOTT JAIL

Serial Number: 80-001019

02/06/2008

17:19:51

-----  
Standard Lot#: 7309011

Last Changed By: D. RAISS #3693

-----  
QAS: D. RAISS #3693

YAVAPAI CSO  
-----

Test	g/210L	Time
Air Blank	0.000	17:20:18
Cal Check	0.098	17:20:37
Air Blank	0.000	17:21:07

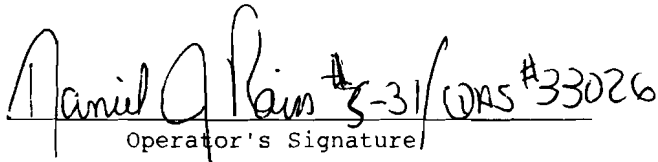
  
Operator's Signature

EXHIBIT G-4  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST DAN RAISS AGENCY YAVAPAI Co. S.O.  
DATE 2-6-08 TIME 1700  
INTOXILYZER SERIAL # 80-001019 LOCATION YCSO-PRES COTT JAIL

OR 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- OR 1. Clock time check.  
OR 2. Date check.

OPERATIONAL TESTS

- OR 1. Alcohol-free subject test result 0. 000 AC.  
OR 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed  
OR 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.  
OR 4. Standard Calibration Check standard 0. .100 AC. Result 0. 098 AC.

Instrument is operating properly and accurately. YES  NO

COMMENTS ALL OK.

SIGNATURE Daniel A Raiss #5-31/QAS #33026

INTOXILYZER 8000  
Location: YCSO PRESCOTT JAIL  
Serial Number : 80-001019  
02/06/2008 17:12:20

Standard Lot#: 730901I  
Last Changed By: D. RAISS #3693  
QAS: D. RAISS #3693  
YAVAPAI CSO  
Operator: D. RAISS #3693  
YAVAPAI CSO

Subject: SQAP,TEST,  
DOB: 01/01/1901  
Sex: M Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	17:12:59
Diagnostic Test	Pass	17:13:26
Air Blank	0.000	17:13:53
0.100 Cal Check	0.099	17:14:12
Air Blank	0.000	17:14:42
Subject Test	0.103*	17:17:50
Air Blank	0.000	17:18:22
Air Blank	0.000	17:18:49
Subject Test	XXX**	17:19:04
Air Blank	0.000	17:19:37

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: YCSO PRESCOTT JAIL  
Serial Number : 80-001019  
02/06/2008 17:11:27

Standard Lot#: 730901I  
Last Changed By: D. RAISS #3693  
QAS: D. RAISS #3693  
YAVAPAI CSO

Operator: D. RAISS #3693  
YAVAPAI CSO

Subject: SQAP,TEST,  
DOB: 01/01/1901  
Sex: M Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	RFI*	17:11:47
Air Blank	0.000	17:12:15

\*RFI Detect

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000

Location: YCSO PRESCOTT JAIL

Serial Number : 80-001019

02/06/2008

17:10:33

Standard Lot#: 730901I

Last Changed By: D. RAISS #3693

QAS: D. RAISS #3693

YAVAPAI CSO

Operator: D. RAISS #3693

YAVAPAI CSO

Subject: SQAP,TEST,

DOB: 01/01/1901

Sex: M Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	IPS*	17:10:56
Air Blank	0.000	17:11:24

\*Improper Sample

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000

Location: YCSO PRESCOTT JAIL

Serial Number : 80-001019

02/06/2008

17:06:38

Standard Lot#: 730901I

Last Changed By: D. RAISS #3693

QAS: D. RAISS #3693

YAVAPAI CSO

Operator: D. RAISS #3693

YAVAPAI CSO

Subject: SQAP,TEST,

DOB: 01/01/1901

Sex: M

Weight: 1

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	17:07:19
Diagnostic Test	Pass	17:07:46
Air Blank	0.000	17:08:14
0.100 Cal Check	0.099	17:08:32
Air Blank	0.000	17:09:02
Subject Test	0.000	17:09:23
Air Blank	0.000	17:09:50
Five Minute Wait	ABT*	
Air Blank	0.000	17:10:27

\*Sequence Aborted

**Not a Successfully Completed Test Sequence**

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST DAN RAISS AGENCY YAVAPAI Co. S.O.  
DATE 2-6-08 TIME 1700  
INTOXILYZER SERIAL # 80-001019 LOCATION YCSO-PRESCOTT JAIL

- DR) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.  
OR  
Pour a standard alcohol concentration solution X AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- DR) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- DR) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- DR) 4. Air blank completed.
- DR) 5. Calibration check completed. Test results 0. 099 AC.
- DR) 6. Air blank completed.
- DR) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE Daniel Q. Raiss #5-31/QAS #33026

DPS Form Exh G-2 (Rev 05-01)

CAL CK. PRIOR TO SOLUTION CHANGE.

INTOXILYZER 8000

Location: YCSO PRESCOTT JAIL

Serial Number: 80-001019

02/06/2008

17:03:31

-----  
Standard Lot#: 633901I

Last Changed By: D. RAISS #3693

-----  
QAS: D. RAISS #3693

YAVAPAI CSO  
-----

Test	g/210L	Time
Air Blank	0.000	17:03:59
Cal Check	0.099	17:04:18
Air Blank	0.000	17:04:47

Manil Kim # S-31/QAS #33026  
Operator's Signature