

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST PT POOLE AGENCY YAVAPAI COUNTY S.O
DATE 1/2/14 TIME 2130
INTOXILYZER SERIAL # 80-001222 LOCATION CAMP VERDE JAIL

- (X) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- (X) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START" - STAND BY MODE
- (X) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (X) 4. Air blank completed.
- (X) 5. Calibration check completed. Test results 0. 99 AC.
- (X) 6. Air blank completed.
- (X) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature] POOLE P.S.

DPS Form Exh G-2 (Rev 05-01)

690 PSI

INTOXILYZER 8000
Location: YCSO-VERDE JAIL
Serial Number: 80-001222
Core Version: 8105.48
01/02/2014 . 21:30:22

Standard Lot#: 15013100A2
Last Changed By: R. POOLE #9014

QAS: R. POOLE #9014
YAVAPAI CSO

Operator: R. POOLE #9014
YAVAPAI CSO

Test	g/210L	Time
Air Blank	0.000	21:31:06
0.100 Cal Check	0.099	21:31:27
Air Blank	0.000	21:31:57

Preventative Maintenance
Performed -- Timer Reset

EXHIBIT G-4
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST RT POOLE AGENCY YAVAPAI COUNTY S.O
DATE 1/2/14 TIME 2133
INTOXILYZER SERIAL # 80-001222 LOCATION CAMP VERDE JAIL

(X) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (X) 1. Clock time check.
(X) 2. Date check.


OPERATIONAL TESTS

- (X) 1. Alcohol-free subject test result 0. 000 AC.
(X) 2. Error recognition logic system functioning.
Not a Successfully Completed Test Sequence printed
(X) 3. Proper sample recognition system.
Not a Successfully Completed Test Sequence printed
Deficient sample printed.
(X) 4. Standard Calibration Check standard 0. 100 AC. Result 0. 99 AC.

Instrument is operating properly and accurately. YES X NO

COMMENTS

680 PSI.

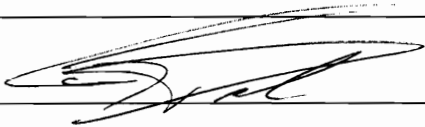SIGNATURE  POOLE ESS QAS# 35629

INTOXILYZER 8000
Location: YCSO-VERDE JAIL
Serial Number: 80-001222
Core Version: 8105.48
01/02/2014

21:33:34

Standard Lot#: 15013100A2
Last Changed By: R. POOLE #9014

QAS: R. POOLE #9014
YAVAPAI CSO

Operator: R. POOLE #9014
YAVAPAI CSO

Subject: SQAP,TEST
DOB: 01/01/1995
Sex: M Weight: 250

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	21:35:01
Diagnostic Test	Pass	21:35:35
Air Blank	0.000	21:36:02
0.100 Cal Check	0.099	21:36:23
Air Blank	0.000	21:36:53
Subject Test	0.000	21:37:12
Air Blank	ABT*	21:37:21
Air Blank	IPS**	21:37:29

*Sequence Aborted

**Improper Sample

Not a Successfully Completed Test Sequence

INTOXILYZER 8000
Location: YCSO-VERDE JAIL
Serial Number: 80-001222
Core Version: 8105.48
01/02/2014

21:47:48

Standard Lot#: 15013100A2
Last Changed By: R. POOLE #9014

QAS: R. POOLE #9014
YAVAPAI CSO

Operator: R. POOLE #9014
YAVAPAI CSO

Subject: SQAP,TEST
DOB: 01/01/1995
Sex: M Weight: 250

15 Minute Deprivation Period? Yes

Test	g/210L	Time
Air Blank	0.000	21:48:50
Diagnostic Test	Pass	21:49:24
Air Blank	0.000	21:49:51
0.100 Cal Check	0.098	21:50:12
Air Blank	0.000	21:50:42
Subject Test	DEF*	21:53:49
Air Blank	0.000	21:54:16
Air Blank	0.000	21:54:44
Subject Test	XXX**	21:54:58
Air Blank	RFI***	21:55:05

*Deficient Sample
**Invalid Sample
Begin new deprivation period
***RFI Detect

Not a Successfully Completed Test Sequence

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000

STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST RT POOLE AGENCY YAVAPAI COUNTY S.O

DATE 1/2/14 TIME _____


INTOXILYZER SERIAL # 80-001222 LOCATION CAMP VERDE JAIL

- (X) 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
~~Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C~~
- (X) 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- (X) 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- (X) 4. Air blank completed.
- (X) 5. Calibration check completed. Test results 0. 098 AC.
- (X) 6. Air blank completed.
- (X) 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE 

DPS Form Exh G-2 (Rev 05-01)

690 PSI



INTOXILYZER 8000

Location: YCSO-VERDE JAIL

Serial Number: 80-001222

Core Version: 8105.48

01/02/2014

21:57:38

Standard Lot#: 15013100A2

Last Changed By: R. POOLE #9014

QAS: R. POOLE #9014

YAVAPAI CSO

Operator: R. POOLE #9014

YAVAPAI CSO

Test g/210L Time

Air Blank 0.000 21:58:09
0.100 Cal Check 0.098 21:58:30
Air Blank 0.000 21:58:59

Preventative Maintenance
Performed -- Timer Reset

RECEIVED

JAN 3 2014

TC