

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000  
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST T. LAWRENCE #61 AGENCY PRESOTT VALLEY PD


DATE 12-5-09 TIME 2015

INTOXILYZER SERIAL # 80000293 LOCATION PUPD

() 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 0.100 AC.  
OR

Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$

- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- () 4. Air blank completed.
- () 5. Calibration check completed. Test results 0.097 AC.
- () 6. Air blank completed.
- () 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE  #61

INTOXILYZER 8000

Location: PRESCOTT VALLEY PD

Serial Number: 80-000293

12/05/2009

20:49:34

-----  
Standard Lot#: 585220

Last Changed By: A. LAWRENCE #61  
-----

QAS: A. LAWRENCE #61

PRESCOTT VALLEY PD  
-----

Test	g/210L	Time
Air Blank	0.000	20:50:01
Cal Check	0.097	20:50:20
Air Blank	0.000	20:50:49


  
-----  
Operator's Signature

EXHIBIT G-4  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY

STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000

STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST T. LAWRENCE AGENCY PRESOTT VALLEY PD  
DATE 12-5-09 TIME 2056  
INTOXILYZER SERIAL # 806000293 LOCATION PUPD (Booking Room)

(  ) 1. Display Reads "PUSH BUTTON TO START"

DIAGNOSTIC TESTS

- (  ) 1. Clock time check.  
(  ) 2. Date check.

OPERATIONAL TESTS

- (  ) 1. Alcohol-free subject test result 0. 000 AC.  
(  ) 2. Error recognition logic system functioning.  
Not a Successfully Completed Test Sequence printed  
(  ) 3. Proper sample recognition system.  
Not a Successfully Completed Test Sequence printed  
Deficient sample printed.  
(  ) 4. Standard Calibration Check standard 0. 100 AC. Result 0. 096 AC.

Instrument is operating properly and accurately. YES  NO

COMMENTS

90 DAY WAS PERFORMED EARLY DUE TO GAS EXCHANGE  
DRY GAS EXCHANGE LOT # 585220

EX. 23 FEB 2011

SIGNATURE 

INTOXILYZER 8000

Location: PRESCOTT VALLEY PD

Serial Number : 80-000293

12/05/2009

20:56:34

---

Standard Lot#: 585220

Last Changed By: A. LAWRENCE #61

---

OAS: A. LAWRENCE #61

PRESCOTT VALLEY PD

---

Operator: A. LAWRENCE #61

PRESCOTT VALLEY PD

---

Subject: SQAP,TEST

DOB: 01/05/1980

Sex: M

Weight: 185

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	20:58:00
Diagnostic Test	Pass	20:58:28
Air Blank	0.000	20:58:55
0.100 Cal Check	0.097	20:59:14
Air Blank	0.000	20:59:43
Subject Test	0.000	21:00:02
Air Blank	0.000	21:00:29
Five Minute Wait	ABT*	
Air Blank	0.000	21:01:05

\*Sequence Aborted

*A. Lawrence #61*

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: PRESCOTT VALLEY PD  
Serial Number : 80-000293  
12/05/2009 21:01:15

---

Standard Lot#: 585220  
Last Changed By: A. LAWRENCE #61

---

QAS: A. LAWRENCE #61  
PRESCOTT VALLEY PD

---

Operator: A. LAWRENCE #61  
PRESCOTT VALLEY PD

---

Subject: SQAP,TEST  
DOB: 01/05/1980  
Sex: M Weight: 185

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	IPS*	21:02:05
Air Blank	0.000	21:02:33

\*Improper Sample

*A. Lawrence #61*

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: PRESCOTT VALLEY PD  
Serial Number : 80-000293  
12/05/2009 21:03:13

---

Standard Lot#: 585220  
Last Changed By: A. LAWRENCE #61

---

QAS: A. LAWRENCE #61  
PRESCOTT VALLEY PD

---

Operator: A. LAWRENCE #61  
PRESCOTT VALLEY PD

---

Subject: SQAP,TEST  
DOB: 01/05/1980  
Sex: M Weight: 185

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	RFI*	21:04:00
Air Blank	0.000	21:04:29

\*RFI Detect

*A. Lawrence #61*

**Not a Successfully Completed Test Sequence**

INTOXILYZER 8000  
Location: PRESCOTT VALLEY PD  
Serial Number : 80-000293  
12/05/2009 21:05:11

---

Standard Lot#: 585220  
Last Changed By: A. LAWRENCE #61

---

QAS: A. LAWRENCE #61  
PRESCOTT VALLEY PD

---

Operator: A. LAWRENCE #61  
PRESCOTT VALLEY PD

---

Subject: SQAP,TEST  
DOB: 01/01/1980  
Sex: M Weight: 185

---

15 Minute Deprivation Period? Yes

---

Test	g/210L	Time
Air Blank	0.000	21:06:11
Diagnostic Test	Pass	21:06:39
Air Blank	0.000	21:07:06
0.100 Cal Check	0.096	21:07:25
Air Blank	0.000	21:07:54
Subject Test	0.124*	21:11:03
Air Blank	0.000	21:11:35
Air Blank	0.000	21:12:02
Subject Test	XXX**	21:12:27
Air Blank	0.000	21:13:02

\*Deficient Sample

\*\*Invalid Sample

Begin new deprivation period

*A. Lawrence #61*

**Not a Successfully Completed Test Sequence**

EXHIBIT G-2  
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY  
STANDARD QUALITY ASSURANCE PROCEDURES  
INTOXILYZER MODEL 8000


STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST T. LAWRENCE AGENCY PRESOTT VALLEY PD

DATE 12-5-09 TIME 2115

INTOXILYZER SERIAL # 80-000293 LOCATION \_\_\_\_\_

- () 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.  
OR  
Pour a standard alcohol concentration solution \_\_\_\_\_ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach  $34^{\circ}\text{C} \pm 0.2^{\circ}\text{C}$
- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- () 4. Air blank completed.
- () 5. Calibration check completed. Test results 0. 096 AC.
- () 6. Air blank completed.
- () 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE 

INTOXILYZER 8000

Location: PRESCOTT VALLEY PD

Serial Number: 80-000293

12/05/2009

21:14:29

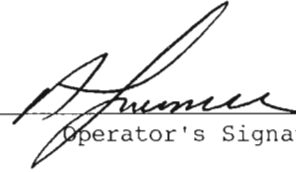
-----  
Standard Lot#: 585220

Last Changed By: A. LAWRENCE #61  
-----

QAS: A. LAWRENCE #61

PRESCOTT VALLEY PD  
-----

Test	g/210L	Time
Air Blank	0.000	21:14:56
Cal Check	0.096	21:15:15
Air Blank	0.000	21:15:44



-----  
Operator's Signature