

10f2

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST T. LAWRENCE AGENCY Prescott Valley PD
DATE 3-9-18 TIME 1824
INTOXILYZER SERIAL # 80-000293 LOCATION PVPD Booking Room

- () 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution .100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- () 4. Air blank completed.
- () 5. Calibration check completed. Test results 0. .000 AC.
- () 6. Air blank completed.
- () 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE T. Lawrence #61

DPS Form Exh G-2 (Rev 05-01)

1 ACCIDENTLY SELECTED ~~DRY~~ WET (WET CONTROL TEST)
INSTEAD OF DRY (DRY CONTROL TEST). OBVIOUSLY
THE CALIBRATION IS @ .000. MY MISTAKE.

INTOXILYZER 8000

Location: PRESCOTT VALLEY PD

Serial Number: 80-000293

Core Version: 8105.48

03/09/2018

18:24:46

Standard Lot#: 06117100A2

Last Changed By: B. PENNER #29

QAS: A. LAWRENCE #61

PRESCOTT VALLEY PD

Operator: A. LAWRENCE #61

PRESCOTT VALLEY PD

Test	g/210L	Time
Air Blank	0.000	18:25:17
0.100 Cal Check	0.000*	18:26:01
Air Blank	0.000	18:26:33

*Calibration Check Out of Tolerance

*I ACCIDENTLY SELECTED WET WOULD
I SHOULD HAVE SELECTED Dry.*

[Signature]
#61

EXHIBIT G-2
THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
STANDARD QUALITY ASSURANCE PROCEDURES
INTOXILYZER MODEL 8000
STANDARD CALIBRATION CHECK PROCEDURE

QA SPECIALIST T. LAWRENCE AGENCY PRESOTT VALLEY PD

DATE 3-9-18 TIME 1828

INTOXILYZER SERIAL # 80-000293 LOCATION PUPD BOOKING ROOM

- () 1. Ensure that gas tank is attached to instrument and contains a standard alcohol concentration solution 100 AC.
OR
Pour a standard alcohol concentration solution _____ AC, into a clean dry simulator and assemble the simulator. Ensure that a tight seal has been made. Turn on the simulator and allow temperature to reach 34°C ± 0.2°C
- () 2. Intoxilyzer 8000 display reads "PUSH BUTTON TO START"
- () 3. Go to the "Control Testing Menu". Select "D" for dry control test or "W" for wet control test. After selection is made press ENTER.
- () 4. Air blank completed.
- () 5. Calibration check completed. Test results 0. 099 AC.
- () 6. Air blank completed.
- () 7. Remove printed record. Attach the record to the completed checklist.

SIGNATURE [Signature] #61

DPS Form Exh G-2 (Rev 05-01)

* 31 DAY HAS EXPIRED. SCREEN STATED TO
CONTACT QAS. THE ~~INTOX 8000~~
WAS THEN PUT BACK INTO SERVICE AFTER
A G-2 WAS COMPLETED.

INTOXILYZER 8000

Location: PRESCOTT VALLEY PD

Serial Number: 80-000293

Core Version: 8105.48

03/09/2018

18:28:04

Standard Lot#: 06117100A2


Last Changed By: B. PENNER #29

QAS: A. LAWRENCE #61

PRESCOTT VALLEY PD

Operator: A. LAWRENCE #61

PRESCOTT VALLEY PD

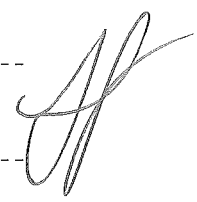

Test	g/210L	Time
Air Blank	0.000	18:28:37
0.100 Cal Check	0.099	18:28:57
Air Blank	0.000	18:29:27

Preventative Maintenance
Performed -- Timer Reset

