

26-013982

ARIZONA FORENSIC BREATH ALCOHOL ANALYTICAL REPORT

INSTRUMENT INFORMATION

Analytical Instrument: Intoxilyzer 9000
Serial Number: 90-004108
Software Version: 9439.01.00
Analytical Report Number: 41080320260211

QAS: MCLAIN, EVAN
QAS Permit #: 30404
Agency: YAVAPAI CSO
Last 31-Day Check: 02/11/2026
Last Annual Maintenance: 11/10/2025

SUBJECT INFORMATION

Name: 31-Day Check
Test Date: 03/20/2026
Driver's License #:
Gender:
Date of Birth:
Age:

Weight:
State of Issue:
Driver's License Expiration:
Deprivation Start Time: 00:30
15 - Minute Deprivation: Yes

OPERATOR INFORMATION

Name: CEDRO, RYAN
Agency: YAVAPAI CSO

Permit #: 30397

STANDARD INFORMATION

Standard Value: 0.100
Standard Lot #: 232492
Expiration Date: 07/05/2026
Bottle #: 15
Last Changed By: MCLAIN, EVAN

Permit #: 30404

Test	g/210L	Time
Air Blank	0.000	00:53:00
Diagnostic Test	PASS	00:53:36
Air Blank	0.000	00:54:12
Calibration Chk	0.098	00:54:34
Air Blank	0.000	00:55:13
Subject Test 1	DEF*	00:58:30
Air Blank	0.000	00:59:18
Air Blank	0.000	00:59:59
Subject Test 2	0.000	01:00:24
Air Blank	0.000	01:01:05
Wait		01:05:08
Air Blank	0.000	01:05:45
Subject Test 3	INV**	01:06:24
Air Blank	RFI***	01:06:45

*Deficient Sample
**Invalid Sample - Begin new deprivation period
***RFI Detect

RESULTSEXCEPTION MESSAGES

* Deficient Sample
** Invalid Sample - Begin new deprivation period
*** RFI Detect

OPERATOR COMMENTS

Not a Successfully Completed Test Sequence

All air blank results must be 0.000.
Consecutive subject test results must not differ by more than 0.020 g/210L.
Standard check results must be $\pm 10\%$.

26-013982

EXHIBIT I-2

THIS REPORT PREPARED PURSUANT TO DUTY IMPOSED BY A.A.C. R13-10-104 (A)

ARIZONA DEPARTMENT OF PUBLIC SAFETY
INTOXILYZER MODEL 9000

PERIODIC MAINTENANCE AND STANDARD QUALITY ASSURANCE PROCEDURE

QA SPECIALIST R. CEDRO AGENCY YAVAPAI COUNTY S.O.
DATE 03/20/2026 TIME 0053
INTOXILYZER SERIAL # 90-004108

- ☒ 1. Ensure that gas tank is attached and contains a standard alcohol concentration 0.100 AC

DIAGNOSTIC TESTS

- ☒ 1. Clock time check
☒ 2. Date check

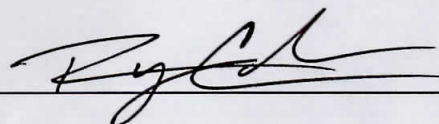
OPERATIONAL TESTS

- ☒ 1. Deficient Subject Test (Proper Sample Recognition)
Deficient Sample printed
☒ 2. Alcohol-free Subject Test (Proper Sample Recognition):
0.000 AC
☒ 3. Mouth Alcohol Subject Test (Proper Sample Recognition):
Invalid Sample – Begin new deprivation period printed
☒ 4. Radio Frequency Interference Test (Error Recognition):
RFI Detect printed
☒ 5. Standard Calibration Check:
0.098 AC
☒ 6. Air Blanks Completed
☒ 7. Timer Reset

Not a Successfully Completed Test Sequence will be printed

Instrument is operating properly and accurately. YES ☒ NO ☐

COMMENTS:

SIGNATURE  R. CEDRO #13294